





installing wifi

How to activate 4G wifi for PowerMe™ Table

4G Connection

Includes 1 x TP-Link 4G LTE Mobile Wi-Fi M7350
USB power cable and USB outlet included and built into table

A 4G sim card is required. The service connection is the customers responsibility.

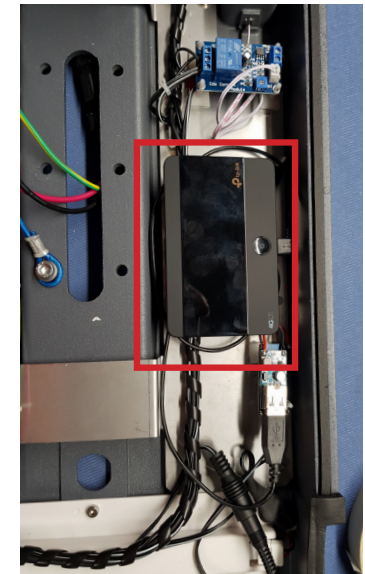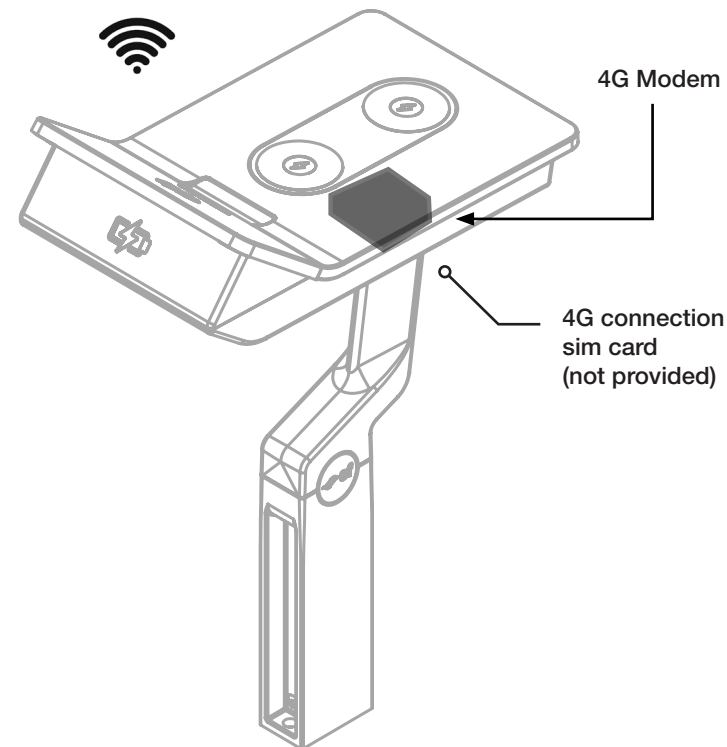

The TP-Link unit will be connected within the table as shown above.

Welcome and congratulations on your purchase from **Street Furniture Australia**. This is a guide to assist in activating the 4G wifi device in your PowerMe™ Table.

Before beginning installation please read through this guide thoroughly.

The PowerMe™ comes available with a 4G router. **Street Furniture Australia provide the hardware (router) and power provision only** - the service connection or other related hardware/costs are to be supplied by the customer.

© Street Furniture Australia Pty Limited ABN 46 070 910 100

Australia 1800 027 799
United States +1 877 406 6434
International +61 2 8774 8888

Email info@streetfurniture.com
N6 391 Park Road, Regents Park
NSW 2143, Australia

Version 1 @ 23.08.19 MDP-20

streetfurniture.com




Quick Installation Guide

4G LTE Mobile Wi-Fi
M7350


Install the SIM Card and Battery

Connect to the Internet

1 Remove the back cover.

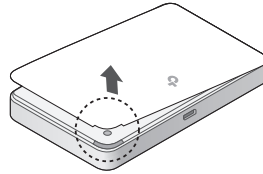


2 Insert the SIM card.

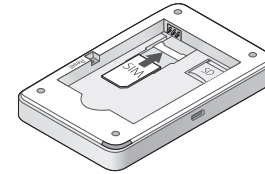


- A micro or nano SIM card must be converted using the SIM card adapter provided.
- The SD card slot can be used for storage and media sharing.
- The SIM card and SD card are not provided.

3 Install the provided battery.

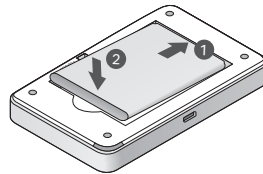

4 Replace the cover.

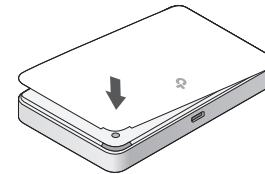


1 Press and hold the Φ button until the welcome screen appears.





- To power off, press and hold the Φ button until "Power Off" appears.

2 You will find the following messages on the screen. Follow the instructions to connect to the Mobile Wi-Fi.

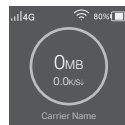

  Press the **MENU** button twice and then press the Φ button to select **Device Info**. Use the SSID and Password shown on the screen to connect to your Mobile Wi-Fi.



Enjoy!




- If other messages display on the screen, refer to FAQ > Q3.
- By default, Power Saving is enabled and the Mobile Wi-Fi will turn off the Wi-Fi connection if no wireless devices are connected to the Mobile Wi-Fi for 10 minutes. Press the Φ or **MENU** button to resume the Wi-Fi connection.

Screen Display


! The screen display will automatically turn off after being idle for 15 seconds. Press the  or **MENU** button to turn it on again.



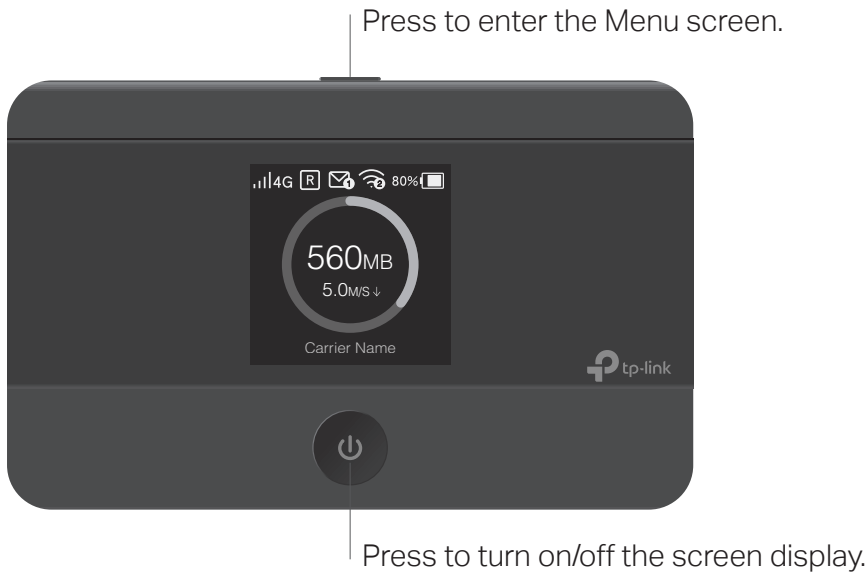


Home Screen



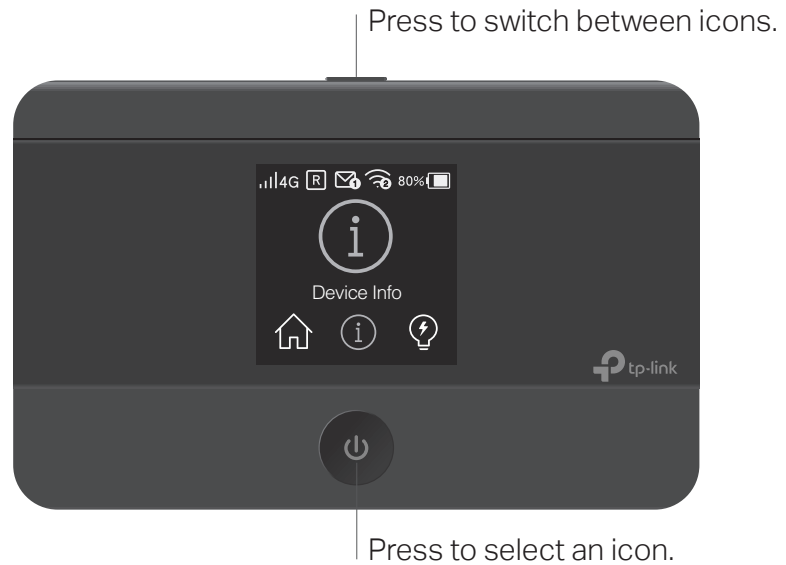


 



Menu Screen

Select the icons to view and customize various functions.



- | | | | |
|---|--------------------------------------|---|--|
|  | Signal Strength |  | Wi-Fi Status and Connected Wi-Fi Devices |
| 4G/3G/2G | Network Type and Internet Connection | 80%  | Battery Life |
|  | Data Roaming | 560MB | Cumulative Data Usage |
|  | Message | 5.0M/s ↓ | Download Speed |

- | | | | |
|---|--------------|---|--------------|
|  | Home |  | WPS |
|  | Device Info |  | Network Mode |
|  | Power Saving |  | App Download |
|  | Data Roaming | | |

© Street Furniture Australia Pty Limited ABN 46 070 910 100

Australia 1800 027 799
United States +1 877 406 6434
International +61 2 8774 8888




Email info@streetfurniture.com
 N6 391 Park Road, Regents Park
 NSW 2143, Australia

Version 1 @ 23.08.19 MDP-20

streetfurniture.com

tpMiFi App

Download the **tpMiFi** app to conveniently manage your Mobile Wi-Fi.

-  Modify Wi-Fi settings
-  Send and receive SMS
-  Manage power
-  Share files on the SD card
-  Block devices

How to start?


1. Search for the **tpMiFi** app from App Store or Google Play, or scan the QR code.
2. Connect your wireless device to the Mobile Wi-Fi.
3. Launch **tpMiFi** and enter **admin** to log in.




Charging Your Mobile Wi-Fi

Method 1


Via a Wall Outlet (Recommended)

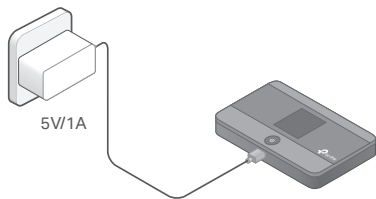

- When  on the battery icon disappears, the Mobile Wi-Fi is fully charged.
- The power adapter is not provided by TP-Link.

Method 2

Via a Computer

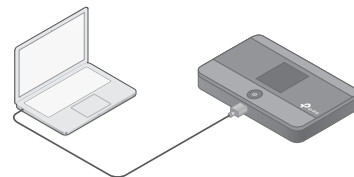

© Street Furniture Australia Pty Limited ABN 46 070 910 100

Australia 1800 027 799
United States +1 877 406 6434
International +61 2 8774 8888

Email info@streetfurniture.com
N6 391 Park Road, Regents Park
NSW 2143, Australia

Version 1 @ 23.08.19 MDP-20

streetfurniture.com

5

FAQ (Frequently Asked Questions)

Q1. Is there an alternative way to manage the Mobile Wi-Fi besides the tpMiFi app?

A. You can manage the Mobile Wi-Fi by using its web management page.

1. Connect your wireless device to the Mobile Wi-Fi.
2. Launch a web browser and visit <http://tplinkmifi.net> or <http://192.168.0.1>. Enter **admin** to log in.

Q2. What should I do if I cannot log in to the web management page?

- Verify that your device is connected to the Mobile Wi-Fi.
- Verify that you have entered <http://tplinkmifi.net> or <http://192.168.0.1> correctly.
- Verify that your computer is set to obtain an IP address automatically.

Q3. What should I do when one of the following messages appears on the screen or I cannot access internet?

A1. PIN Required

- Refer to Q1 to log in to the web management page on your phone. Enter the PIN provided by your mobile carrier.

A2. No SIM Card

- Power off the Mobile Wi-Fi and reinstall the SIM card.

A3. No Service

- Verify that your SIM card is an LTE, WCDMA or GSM SIM card.
- Verify that your SIM card is in your carrier's service area and has sufficient credit.
- Refer to Q1 to log in to the web management page on your phone. Go to **Dial-up > View profile details** and verify the parameters (i.e. APN, username and password) provided by your mobile carrier are correct. If they are not correct, return to the **Dial-up** page and create a new profile with the correct information. Then choose the new profile from the profile list.

A4.  icon

- From the Menu screen, go to **Data Roaming** and turn on **Data Roaming**.

Q4. What should I do if my internet speed is slow?

A. From the Menu screen, go to **Network Mode** and try a different network.

©2017 TP-Link 7106507780 REV5.0.0

Courtesy of TP-Link: [https://static.tp-link.com/7106507780_M7350\(EU\)_V5_QIG.pdf](https://static.tp-link.com/7106507780_M7350(EU)_V5_QIG.pdf)

Q5. How do I restore the Mobile Wi-Fi to its factory default settings?

A. With the Mobile Wi-Fi powered on, remove the cover, and use a pin to press and hold the **RESET** button until **"Power Off"** appears on the screen.

Note: Restoring the Mobile Wi-Fi to its factory defaults will clear all previous settings and you will need to reconfigure it.

Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use damaged charger or USB cable to charge the device.
- Do not use any other chargers than those recommended.
- Do not use the device where wireless devices are not allowed.
- Do not disassemble, crush, puncture, short external contacts, or dispose of the battery in fire or water.

CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.



For technical support, User Guide and other information, please visit <http://www.tp-link.com/support>.



More detailed instructions can be found on TP-Link's website.

<https://www.tp-link.com/au/download/M7350.html>