


INSTALLATION GUIDE

Please read carefully.
Warranty will be void if instructions are not followed.

arquá retrofit kit

DF4-DBKIT


In the Box

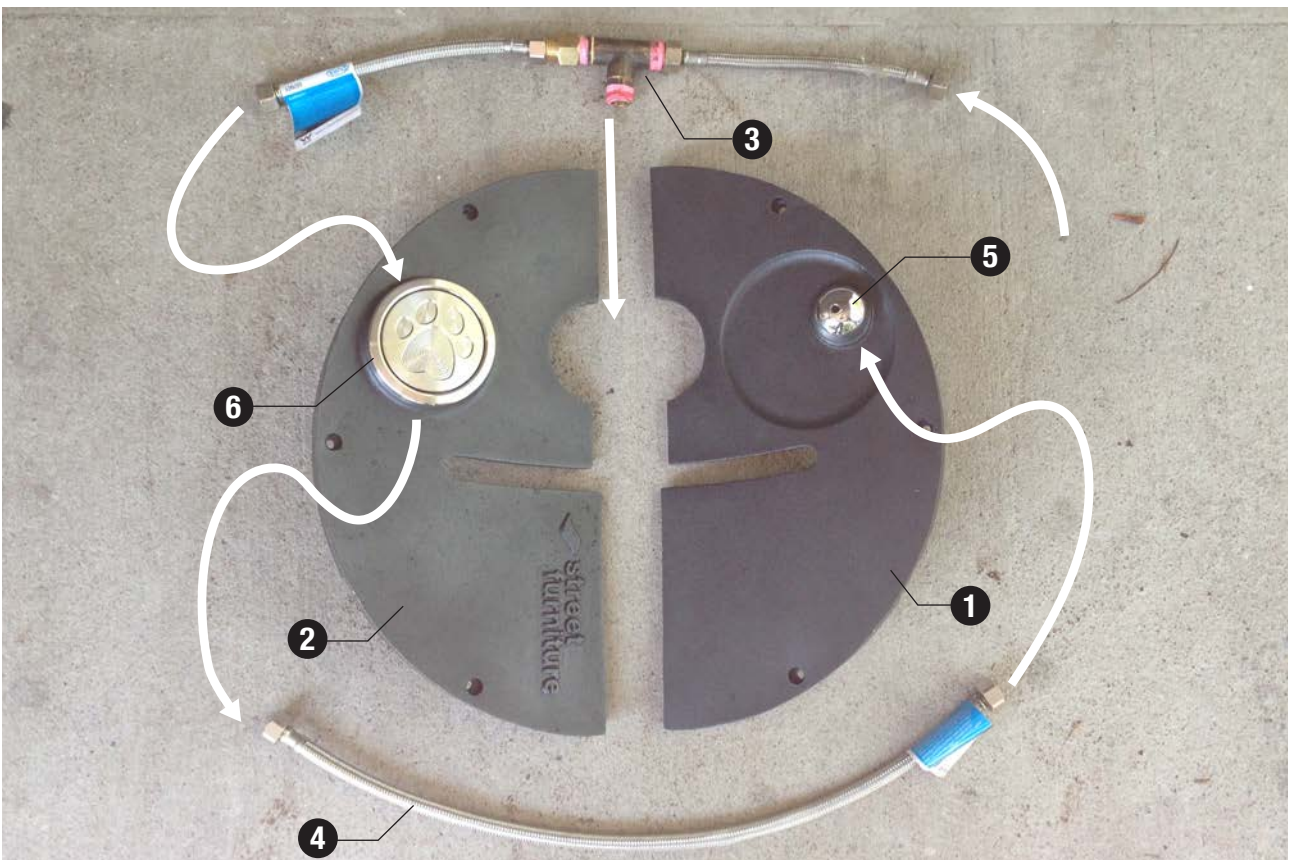


1. Sump cover with valve
2. Sump cover with paw button
3. T connector hose assembly
4. 600mm hose
5. Valve
6. Paw button

For any missing items,
please contact 1800 027 799 or
aftersales@streetfurniture.com


Step 1

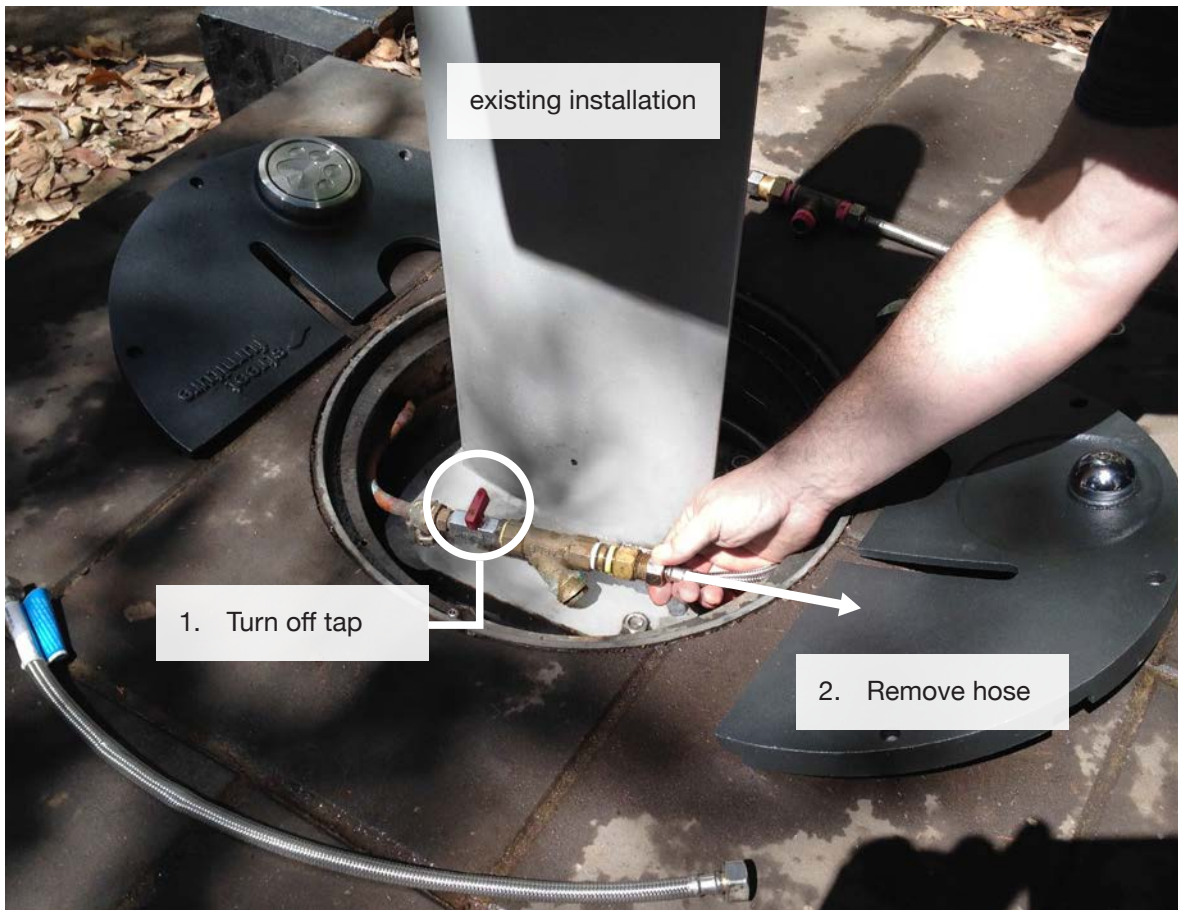


Step 2

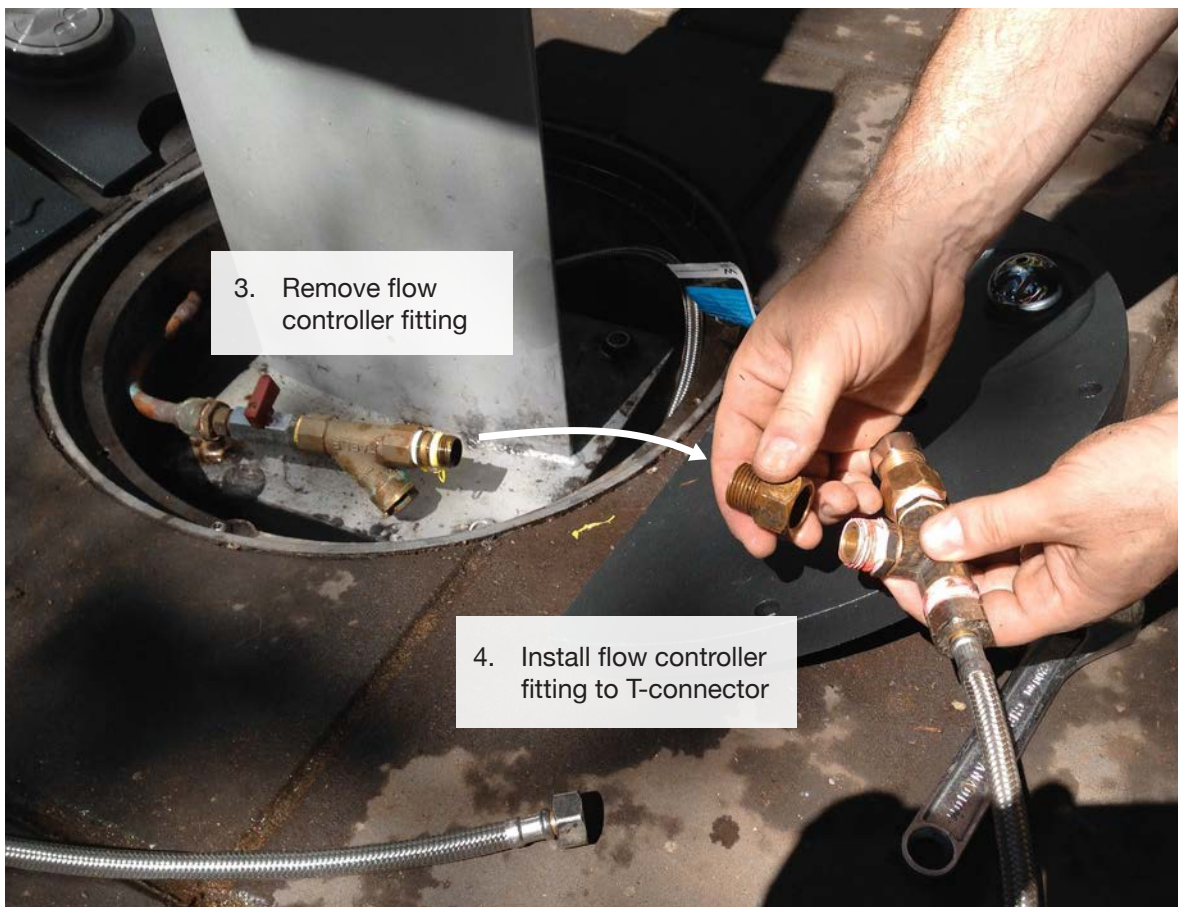


Step 3

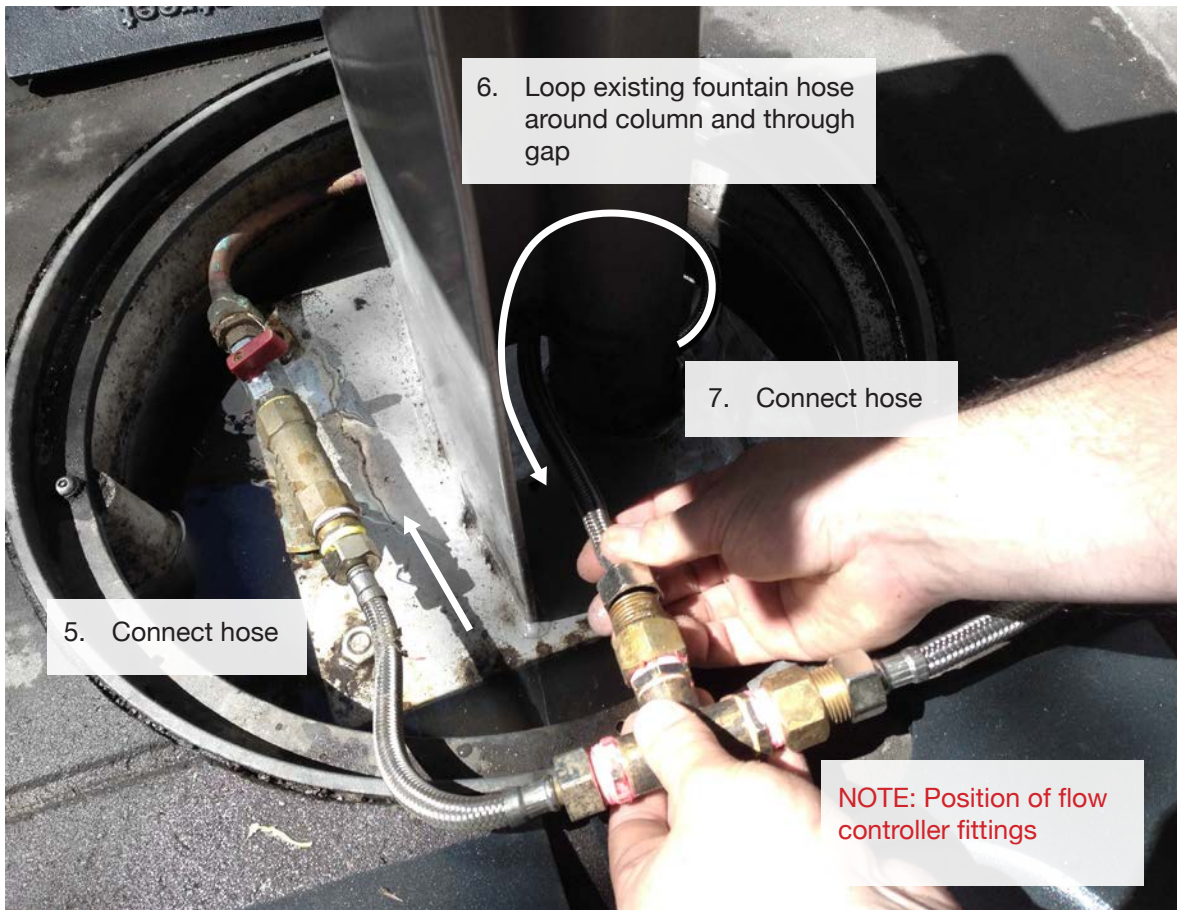

Step 4

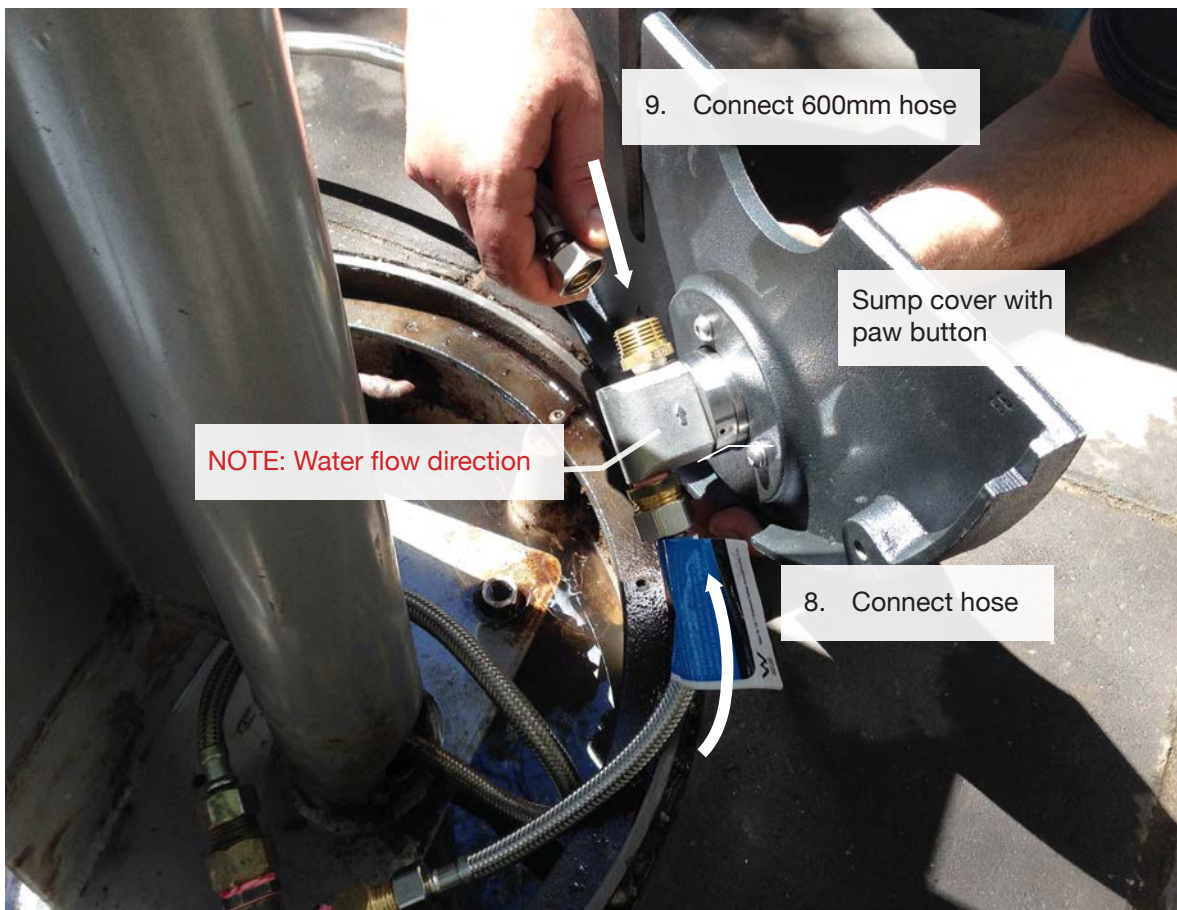

Step 5

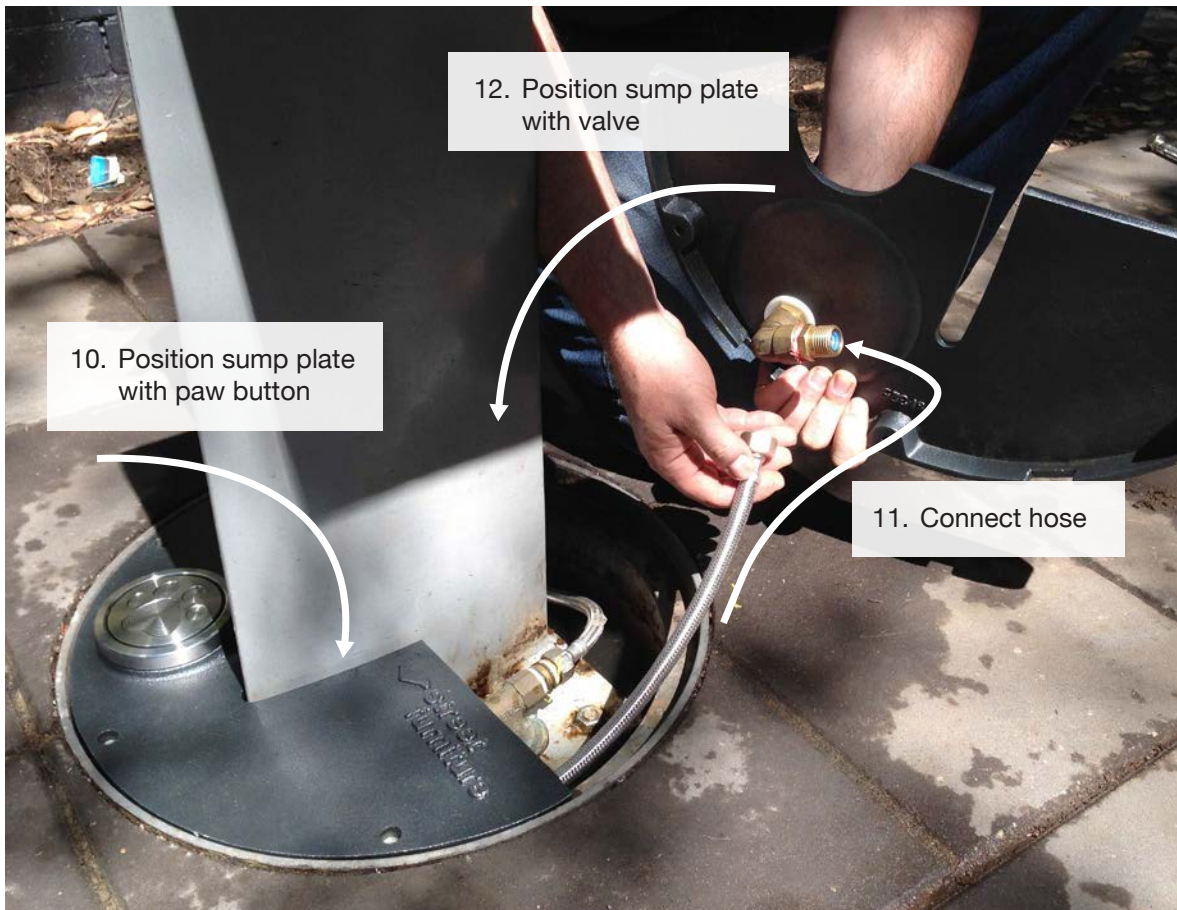

Step 6

